

USER MANUAL

VACUUM PUMP

PCE-RVP SERIES




ENGLISH



User manuals in various languages (français, italiano, español, português, nederlands, türk, polski) can be found via our product search on:
www.pce-instruments.com

STRUCTURE AND TECHNICAL DATA

- 1 - Oil Filling Cap
- 2 - Oil Tank
- 3 - Oil Sight Glass
- 4 - Oil Drain Plug
- 5 - Handle
- 6 - Fan Cover
- 7 - Motor
- 8 - Base

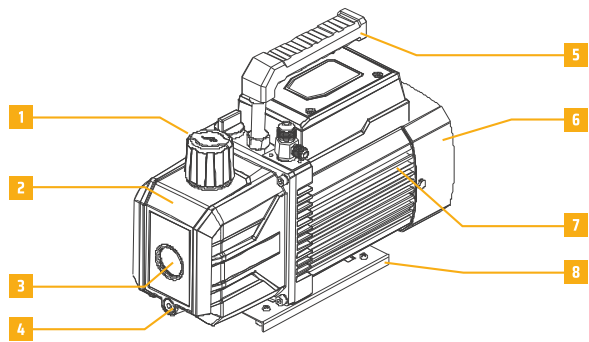

Technical Data

Model		Single Stage Rotary Vane Vacuum Pump		
		PCE-RVP 120	PCE-RVP 180	PCE-RVP 1200
Rated power supply		220V ... 50Hz / 110V ... 60Hz		
Flow Rate	CFM	2/2.4	8/9.6	12/14.4
	L/min	56/68	226/270	340/407
Ultimate Vacuum (Micron)		150	150	150
Motor Power (HP)		1/4	3/4	1
Intake Fittings		1/4" Flare	1/4" & 3/8" Flare	
Dimensions (mm)		281×123×230	383×138×255	383×138×255
Oil Capacity (ml)		280	780	780
N.W.(kg)		5.3	14	14

Model		Double Stage Rotary Vane Vacuum Pump		
		PCE-RVP 220	PCE-RVP 240	VB2200
Rated power supply		220V ... 50Hz / 110V ... 60Hz		
Flow Rate	CFM	2/2.4	4/4.8	12/14.4
	L/min	56/68	113/135	340/407
Ultimate Vacuum (Micron)		15	15	15
Motor Power (HP)		1/3	1/2	1 1/2
Intake Fittings		1/4" Flare	1/4" & 3/8" Flare	
Dimensions (mm)		305×123×230	332×129×242	383×138×255
Oil Capacity (ml)		280	410	620
N.W.(kg)		8	10	15.7

APPLICATIONS AND FEATURES

PCE-RVP Series vacuum pumps are used to create a vacuum by evacuating gas from a sealed vessel. The pumps are applicable for refrigeration maintenance to charge refrigerants of CFC, HCFH and HFC such as R12/R22/R134a (R32 version can be used for R32 and 1234yf) and air extraction in printing machines, food processing, gas analysis, thermoplastic molding, etc.. In some cases they can be used as fore pumps for high vacuum equipment.

Features

- » **High ultimate vacuum and high pumping speed:** High ultimate vacuum and high pumping speed are achieved by taking integral cylinder construction with high precision.
- » **High efficient filtration:** High quality filter element is used to reduce oil mist effectively.
- » **Comfortable and robust handle:** Soft rubber lined handle, comfortable to carry and use.
- » **Elegant appearance:** Unique and elegant appearance with square-shaped pump casing and fan cover.

PREPARATION, OPERATION AND SAFETY PRECAUTIONS

Preparation

- » Make sure the power supply matches the voltage and frequency marked on the pump nameplate.
- » Make sure the switch is in the OFF position before connecting electrical power to the pump.
- » Fill oil till the oil level reaches the middle position on oil sight glass. Low oil level will cause pump performance loss while high oil level may result in oil spraying.

Operation

- » Before using the vacuum pump, remove the inlet cap and connect the pump to the sealed vessel (Check and make sure the thread of the pipe fits that of the inlet port). The length of the connecting pipe shall be as short as possible.
- » Check and make sure the air inlet is well sealed without any leakage.
- » Switch on the pump to start operation.
- » Close the valve between the pump and the sealed vessel when the operation is finished.
- » Switch off the pump and remove the power plug.
- » Remove the connecting pipe.

Safety Precautions

- » Always wear goggles when handling air-conditioning refrigerant.
- » Do not contact the refrigerant directly! Personal injury may occur.
- » Hot surface! Do not touch the oil tank or pump casing during pump operation.
- » Risk of electrical shock! Make sure all equipment are properly grounded when connecting the power supply.
- » The pump is not allowed to operate more than 3 minutes while the inlet is exposed to the atmosphere.
- » The ambient temperature for proper operation is 5°C ... 40°C.
- » The voltage of the pump is 220V±10%/50Hz. The power socket must be grounded.
- » The pump body will be damaged to take out the refrigerant when the pump chamber is pressurized. It is recommended to use special equipment to do this work.

WARNING!

To avoid personal injury, please carefully read and follow the instructions of this manual.

MAINTENANCE AND TROUBLESHOOTING

Pump oil selection

It's important to select proper vacuum pump oil to achieve the desired ultimate vacuum. To ensure the best performance of the pump, it is recommended to use vacuum pump oil with low viscosity grade of 32 ... 46.

The pump oil must be replaced immediately while it is emulsified or contaminated.

Oil changing procedure

- » Operate the pump for about one minute to warm it up before changing the oil;
- » Open the inlet when the pump is running so that the oil in the pump chamber is forced to flow out. Switch off the pump and remove the drain plug to drain the oil. Keep the drained oil in a suitable vessel and dispose of it properly;
- » Tilt the pump body towards the drain plug to completely empty the pump chamber; Tighten the drain plug;
- » Remove the filling plug and add new pump oil;
- » Tighten the inlet cap, operate the pump for one minute and check the oil level. In case the oil level is below MIN position on oil sight glass, fill oil to a level between MAX and MIN position.
- » Install the oil mist trap.

Troubleshooting

Failure	Possible Reason	Remedy
Low vacuum	The air inlet cap is loose	Tighten the air inlet cap
	The rubber ring inside the air inlet cap is damaged	Replace rubber ring
	Oil is insufficient	Fill oil to the middle line on oil sight glass
	Oil is emulsified or dirty	Replace the oil
	The oil inlet is blocked or the oil supply is insufficient	Clean the oil inlet and the filter
	The connecting pipe leaks	Check and fix the pipe
	The pump is improper	Check the size of the vessel, recalculate and select a proper model
	The service time of the pump is so long that parts are worn	Check and repair, or replace the pump
Oil leak	Oil seal is damaged	Replace the seal
	Oil tank connections are loose or damaged	Check and repair, or replace the pump
Oil spray	Too much oil inside the pump	Drain oil to the middle line on oil sight glass
	Pressure at inlet remains high for a long time	Choose a pump with higher pumping speed
Difficult startup	Oil temperature is too low	The air inlet is exposed to the atmosphere, repeatedly start the motor or heat the pump oil
	Motor or power supply is defective	Check and repair
	Foreign objects enter the pump	Check and repair
	Voltage is too low	Check the voltage

Note

- » If the problem is still not fixed, please contact your local dealer or send the pump to a professional repair center to find out a solution.
- » We reserve the right to modify any information including design and technical data in this manual without prior notice.

DISPOSAL

For the disposal of batteries in the EU, the (EU) 2023/1542 directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose. In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law. For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations. If you have any questions, please contact PCE Instruments.

PCE INSTRUMENTS CONTACT INFORMATION

Germany

PCE Deutschland GmbH
Im Langel 26
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 0
Fax: +49 (0) 2903 976 99 29
info@pce-instruments.com
www.pce-instruments.com/deutsch

France

PCE Instruments France EURL
2, rue Georges Kuhnmmunch
67250 Soultz-sous-Forêts
France
Tel.: +33 (0) 972 35 37 17
Fax: +33 (0) 972 35 37 18
info@pce-france.fr
www.pce-instruments.com/french

Spain

PCE Ibérica S.L.
Calle Mula, 8
02500 Tobarra (Albacete)
España
Tel.: +34 967 543 548
info@pce-iberica.es
www.pce-instruments.com/espanol

United Kingdom

PCE Instruments UK Ltd
Trafford House
Chester Rd, Old Trafford
Manchester M32 0RS
United Kingdom
Tel: +44 (0) 161 464902 0
Fax: +44 (0) 161 464902 9
info@pce-instruments.co.uk
www.pce-instruments.com/english

Italy

PCE Italia s.r.l.
Via Pesciatina 878 / B-Interno 6
55010 Loc. Gragnano
Capannori (Lucca)
Italia
Telefono: +39 0583 975 114
Fax: +39 0583 974 824
info@pce-italia.it
www.pce-instruments.com/italiano

Turkey

PCE Teknik Cihazları Ltd.Şti.
Halkalı Merkez Mah.
Pehlivan Sok. No.6/C
34303 Küçükçekmece - İstanbul
Türkiye
Tel: 0212 471 11 47
Faks: 0212 705 53 93
info@pce-cihazlari.com.tr
www.pce-instruments.com/turkish

The Netherlands

PCE Brookhuis B.V.
Twentepoort West 17
7609 RD Almelo
Nederland
Telefoon: +31 (0)53 737 01 92
info@pcebenelux.nl
www.pce-instruments.com/dutch

United States of America

PCE Americas Inc.
1201 Jupiter Park Drive, Suite 8
Jupiter / Palm Beach
33458 FL
USA
Tel: +1 (561) 320-9162
Fax: +1 (561) 320-9176
info@pce-americas.com
www.pce-instruments.com/us

Denmark

PCE Instruments Denmark ApS
Birk Centerpark 40
7400 Herning
Denmark
Tel.: +45 70 30 53 08
kontakt@pce-instruments.com
www.pce-instruments.com/dansk



Subject to change without notice

TRUST IN EVERY MEASUREMENT.